


Code: FB74

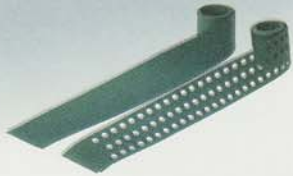

HEIDELBERG SM74

Code: FBGTO



HEIDELBERG GTO52

*Durable,
Flexible,
Anti-static*

HEIDELBERG

CODE:	MFG P/N	MODEL:
FBGTO	89.020.007/01B	GTO52
FBMO	53.020.029	MO
FBSO	66.020.080/F	SORK/SORM SORD
FBSM52	G2.020.009	SM52
FB74	MV.025.949	SM74 (I set: I perforated/I standard)
FB102/72	86.020.029/D	SM102/72
FB74SSY	MV.032.934	SM74 SLOWDOWN BELT (YELLOW)
FB74SSG	MV.032.933	SM74 SLOWDOWN BELT (GREY)
FB102SS	C3.015.453	SM102 SLOWDOWN BELT

Code: FB74SSY
SM74 s/n 622818+

Code: FB74SSG
SM74 s/n 622818+
for thin paper/
material



Sheet Slowdown Belt for
HEIDELBERG SM74

Code: FB102SS



Sheet Slowdown Belt for
HEIDELBERG SM102 s/n 529811+, 72,
SM74 s/n 621124+, CD102 s/n 543064+

Self tracking

SM74 sheet slowdown belt.
Punched, endless with self
tracking guide. Two models
available: grey and yellow

SM102 sheet slowdown belt -
perforated in staggered pattern
and assembled for easy
installation.

*Precision cut, punched
and skived*

UNIQUE PACKAGING



For easy handling and safe
storage with clear, precise
labeling detailing product code,
press model, length and width.

PERFECT SKIVING




For accurate and easy
assembly!

PERFORATED BELTS




Perforations enable the belts to
have air suction ensuring the
material is conveyed as
intended and also allows for
cooling air to pass through.

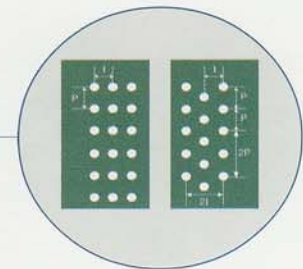

Examples of precise perforation
patterns. Perforations can be
executed according to
customer's specifications.

Code: FB700

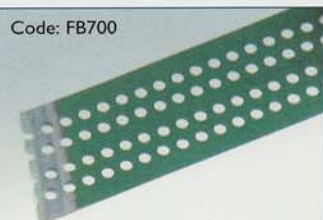

ROLAND 700

Code: FB300



ROLAND 300

ROLAND

CODE:	MODEL:
FBOB	FAVORIT OB
FB200	R200
FB300	R300
FBPAR	PARVA

CODE:	MODEL:
FB3B	REKORD 3B
FB600	R600
FB700	R700
FB800	R800

KOMORI

CODE:	MODEL:
FBKL40	KOMORI LITHRONE 40"
FBKL28	KOMORI LITHRONE 28"

CODE:	MODEL:
FBKL26	KOMORI LITHRONE 26"
FBKS26	KOMORI SPRINT 26"